



 


 


 
 


 
 






 



 
 



 

 
 
 
 
 
 
 
 
 
 
 
 
 

 


 



 
 

 


 


 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Options	 Options
 Input	 AV	 Home	 Smart
 Sync Menu	 Menu	 Up	 Up
 I<<	 I<<	 Down	 Down
 Pause	 Pause	 Right	 Right
 Stop	 Stop	 Left	 Left
 >>I	 >>I	 OK	 Ok
 <<	 <<	 Digital/Analog	 Media
 Play	 Play	 [+]	 3D
 >>	 >>	 Scene	 TV/R
 Red	 Red	 Audio	 Dual
 Green	 Green	 1	 1
 Yellow	 Yellow	 2	 2
 Blue	 Blue	 3	 3
 Guide	 Guide	 4	 4
 [i+]/[?]	 Info	 5	 5
 Return	 Back	 6	 6





Original		Sustituto	
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	[...]		Subt
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH/Prog+		Ch +
	CH/Prog-		Ch -
	Recall		Pre Ch

Original		Sustituto	

