



 

 

 
 

 

 

 



 



 

 

 

 









 



 
 


























Original	Sustituto
 D.Menu	 D.Menu / Top
 Power	 Power
 Open / Close	 Eject / Surround
 Info	 Info / Angle
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio / Lang I/II	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CH. List	 Smart / List
 Screen	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Sustituto
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Q.View	 Shift + Menu /
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Vol +	 Vol+
 P+	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 Menu	 Menu / Home
 FAV	 Fav / Marker / PC
 Up	 Up
 Left	 Left
 OK	 OK



