 










 



 
 

 










 

 





Original	Sustituto
 Power	 Power
 I<<	 I<<
 Stop	 Stop
 >>I	 >>I
 <<	 <<
 Play / Pause	 Play
 Play / Pause	 Pause
 >>	 >>
 EPG	 Guide
 Source	 AV
 Format	 Format
 Menu	 Menu
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right

Original	Sustituto
 Down	 Down
 Exit	 Exit
 Options	 Options
 Page/CH +	 Ch +
 Page/CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Original	Sustituto		Original	Sustituto
	7		7		
	8		8		
	9		9		
	0		0		

