







 





























 








 
















 









 








Original	Sustituto
	 Power
	 D.Menu / Top
	 Sound / Title
	 Shift + Back / Return
	 AV / Input / RDS
	 Info / Angle
	 Audio / Lang I/II
	 Shift + Text /
	 Red / Netflix / Search
	 Text / Goto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Back / Return
	 CH+ / Page+
	 Up

Original	Sustituto
	 Right
	 Vol+
	 Left
	 Vol-
	 OK
	 CH- / Page-
	 Down
	 Shift + Power
	 Play / Slow
	 Mute / Dimmer
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 Shift + Pause / Step /
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+





Original	Sustituto
 [<>] / Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ▼	 Shift + Up
 0	 0
 ▲	 Shift + Down
 AV1	 Shift + 1
 AV2	 Shift + 2
 AV3	 Shift + 3
 AV4	 Shift + 4

Original	Sustituto
 Timer	 Sleep / Timer
 RGB1	 Smart / List
 RGB2	 Display / Media

