 

 






 
 
 






 

 



 
 
 
 
 
 




Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Auto		Smart
	CH+		Ch +
	CH-		Ch -
	Display		Info
	TV / Radio		TV/R
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK / CH List		Ok
	OK / CH List		List
	Menu		Menu
	Exit		Exit
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep





Original		Sustituto		Original		Sustituto	
	Text		Text		Red		Red
	Hold	 + 	Shift + Stop		Green		Green
	Index		D. Menu		Yellow		Yellow
	Size		Eject		Blue		Blue
	FAV		Pre Ch				
	Subpage	 + 	Shift + Subt				
	Play/Pause / Timeshift		Play				
	Play/Pause / Timeshift		Pause				
	Audio		Dual				
	Stop		Stop				
	Reveal		Media				
	Aspect		Format				
	Subtitle		Subt				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				

