






 




 

 


 




































 





Original	Sustituto
 Ratio	 Picture / Format
 Power	 Power
 Input	 AV / Input / RDS
 Simplink	 Display / Media
 TV / Rad	 TV/Radio /
 Q.Menu	 D.Menu / Top
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return / Exit	 Back / Return
 Return / Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 AV Mode	 Shift + AV / Input / RDS

Original	Sustituto
 Vol +	 Vol+
 Fav / Mark	 Fav / Marker / PC
 P+ / Page+	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 P - / Page-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0





Original	Sustituto	Original	Sustituto
	Q.View		Zoom / Size
	Red		Red / Netflix / Search
	Stop		Stop / Hold
	Green		Green / APP / Repeat
	Play		Play / Slow
	Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	l<<		l<< / Preset-
	<<		<< / Tune-
	T.Opt		Setup / OPT /
	>>		>> / Tune+
	>>		>> / Preset+
	Subtitles		Subtitle / EQ
	Rec		Rec / Rec Mode

Original	Sustituto

