













Original	Sustituto
Power	Power
Open / Close	Eject / Surround
Dimmer	Shift + Mute / Dimmer
BD	Shift + 2
Tuner	Shift + 6
AUX	Shift + 7
1 / RDS Display	1
2	2
3 / TA	3
4 / PTY-	4
5 / PTY Search	5
6 / PTY+	6
7	7
8	8
9	9
Audio	Audio / Lang I/II
0	0

Original	Sustituto
Subtitle	Subtitle / EQ
I<<	I<< / Preset-
Mo/St / Slow	Display / Media
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Play	Play / Slow
>>	>> / Tune+
Vol+	Vol+
Mute	Mute / Dimmer
Tuning+ / CH+	CH+ / Page+
Vol-	Vol-
Step	Shift + Pause / Step /
Tuning- / CH-	CH- / Page-
Menu	Menu / Home
Return	Back / Return





Original	Sustituto
	
Up	Up
	
Left	Left
	
Enter	OK
	
Right	Right
	
Info	Info / Angle
	
Down	Down
	
Exit	Exit / Cancel / Clear
	
Red	Red / Netflix / Search
	
Green	Green / APP / Repeat
	
Yellow	Yellow / YouTube / Repeat
	
Blue	Blue / Prime Video / Random
	
PopUp Menu / Title Menu	Shift + D.Menu / Top Menu
	
Disc Menu	D.Menu / Top
	
Dolby PL. II Mode	Shift + Sound / Title
	
Dolby PL. II Effect	Sound / Title
	
Tuner Memory	Rec / Rec Mode
	
PIP	Picture / Format

Original	Sustituto
	
SFE Mode	Smart / List
	
DSP	Setup / OPT /
	
Repeat	Shift + Green / APP /
	
Repeat A-B	Shift + Yellow / YouTube /
	
Zoom	Zoom / Size
	
Sleep	Sleep / Timer

