





 











Original	Sustituto
 Power	 Power
 Red	 Red
 Green / I-II	 Green
 Green / I-II	 Dual
 Yellow	 Yellow
 Blue	 Blue
 [i+]	 Info
 [↕]	 Eject
 [□]	 Pause
 [?]	 Smart
 Smart Audio	 Shift + Dual
 Radio	 TV/R
 Smart Picture	 Format
 Menu	 Menu
 [≡]	 Text
 Up	 Up
 Left	 Left

Original	Sustituto
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original	Sustituto
	 Sleep
	 Exit

Original	Sustituto

