



 









 


 

 
 



 

 




 




Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Volume+	 Vol +
Update	 Media	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Reveal	 Smart	Menu audio	 Dual
Return TV	 TV/R	Chan.Down	 Ch -
Txt Stop	 Stop	1	 1
Menu video	 D. Menu	2	 2
Info	 Info	3	 3
Text	 Text	4	 4
Txt Expand	 Eject	5	 5
TV/AV	 AV	6	 6
Menu	 Menu	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0



Original	Sustituto	Original	Sustituto
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		

