 


 







Original	Sustituto
	 +  Shift + Power
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 +  Shift + Red / Netflix /
	 +  Shift + Green / APP /
	 +  Shift + Yellow / YouTube /
	 +  Shift + Blue / Prime
	 0
	 3
	 6
	 >> / Tune+
	 2
	 1
	 4

Original	Sustituto
	 << / Tune-
	 9
	 8
	 5
	 >> / Preset+
	 CH+ / Page+
	 7
	 << / Preset-
	 CH- / Page-
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Vol-
	 Mute / Dimmer
	 Setup / OPT /





Original	Sustituto
	Up
	Eject / Surround
	Left
	OK
	Right
	Display / Media
	Down
	Back / Return
	Text / Goto
	Picture / Format
	Shift + Mute / Dimmer
	Sound / Title
	Shift + 1
	Shift + 2
	Shift + 3

Original	Sustituto

