 


 


 
 





 




 



 



 
 

 
 
 

 

 

 

 

 




 











 


 


 







Original	Sustituto	Original	Sustituto
On	Power	Left	Left
Off	Shift + Power	1	1
Vol+	Vol +	2	2
Vol-	Vol -	3	3
Mute	Mute	4	4
Test	Smart	5	5
Night	Exit	6	6
[=]	Text	7	7
Sleep	Sleep	8	8
Surr.	Dual	9	9
SPKR/Menu	Menu	0	0
Delay/Normal	Info	Tun-M/[≡+]	Shift + Guide
CH./[≡?]	TV/R	Mem/[≡◇]	Pre Ch
Digital/[≡X]	Media	Tuning ▲	Ch +
Up	Up	Tuning ▼	Ch -
Down	Down	Direct/Green	Green
Right	Right	Clear/Yellow	Yellow

 








 
 

 




 


 


 
 
 

 

 

 



 
 


 














 

 








 






Original	Sustituto	Original	Sustituto
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<





Original		Sustituto		Original		Sustituto	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original	Sustituto
	+ Shift + 3
	+ Shift + 4
	+ Shift + 5
	+ Shift + 6
	+ Shift + 7
	+ Shift + 8
	+ Shift + 9
	+ Shift + 0
	Exit
	Red
	Green
	Rec
	Blue
	Yellow

Original	Sustituto





Original	Sustituto	Original	Sustituto
	<>		Play
	>>		>>
	<<		<<
	Stop		Stop
	Rec		Rec

