



Original	Sustituto
On	Power
Off	Shift + Power
Mute	Mute / Dimmer
AVR	AV / Input / RDS
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Shift + 4
VID2/TV	Shift + 1
CBL/SAT	Shift + 0
AM/FM	Shift + 6
Sleep	Sleep / Timer
Test	TV/Radio /
Vol+	Vol+
Surr.	Eject / Surround
Night	Zoom / Size
[≡]	Text / Goto

Original	Sustituto
Vol-	Vol-
CH./[≡?]	Picture / Format
SPKR/Menu	Menu / Home
Up	Up
Left	Left
Set	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Normal	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7





Original	Sustituto
8	8
Tun-M/[≡+]	Smart / List
9	9
0	0
Mem/[≡◆]	D.Menu / Top
Tuning ▲	>> / Tune+
Red	Red / Netflix / Search
Direct/Green	Green / APP / Repeat
Clear/Yellow	Yellow / YouTube / Repeat
Preset ▲	>> / Preset+
Blue	Blue / Prime Video / Random
Tuning ▼	<< / Tune-
RDS/D.Skip	Display / Media
Preset ▼	<< / Preset-
<< DVD	Shift + << /
> DVD	Shift + Play /
>> DVD	Shift + >> /

Tune+

Original	Sustituto
Stop DVD	Shift + Stop /
Pause DVD	Shift + Pause / Step /
<</Skip Down	Shift + << / Preset-
Skip Up/ >>	Shift + >> / Preset+





Original	Sustituto
 Power On	 Power
 Power Off	 Shift + Power
 Vol+	 Vol+
 Night	 Zoom / Size
 [=]	 Text / Goto
 Vol-	 Vol-
 CH./[=?]	 Picture / Format
 SPKR/Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Set	 OK
 Right	 Right
 Digital/[=X]	 Setup / OPT /
 Down	 Down
 Delay/Normal	 Sound / Title
 1	 1
 2	 2

Original	Sustituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[=+]	 Smart / List
 9	 9
 0	 0
 Mem/[=◇]	 D.Menu / Top
 Direct	 Green / APP / Repeat
 Clear	 Exit / Cancel / Clear
 Preset ▲	 CH+ / Page+
 Preset ▲	 Shift + >>1 / Preset+
 RDS/D.Skip	 Display / Media
 Preset ▼	 CH- / Page-
 Preset ▼	 Shift + I<< / Preset-





Original	Sustituto
	<< / Tune-
	Play / Slow
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze
	I<< / Preset-
	>>I / Preset+

Original	Sustituto





Original	Sustituto
Power On	Power
Power (On/Off)	Mute / Dimmer
Power Off	Shift + Power
PR+ VCR	CH+ / Page+
Input VCR	AV / Input / RDS
Vol+ VCR	Vol+
PR- VCR	CH- / Page-
Vol- VCR	Vol-
SPKR/Menu	Menu / Home
Delay/Normal	Sound / Title
1	1
1 VCR	Shift + 1
2	2
2 VCR	Shift + 2
3	3
3 VCR	Shift + 3
4	4

Original	Sustituto
4 VCR	Shift + 4
5	5
5 VCR	Shift + 5
6	6
6 VCR	Shift + 6
7	7
7 VCR	Shift + 7
8	8
8 VCR	Shift + 8
Tun-M/[≡+]	Smart / List
9	9
9 VCR	Shift + 9
0	0
0 VCR	Shift + 0
Mem/[≡♦]	D.Menu / Top
Direct	Green / APP / Repeat
Clear VCR	Shift + Exit / Cancel / Clear





Original	Sustituto
 Preset ▲/Blue	 Blue / Prime Video / Random
 RDS/D.Skip	 Display / Media
 <<	 << / Tune-
 << VCR	 Shift + << /
 Play	 Play / Slow
 Play VCR	 Shift + Play /
 >>	 >> / Tune+
 >> VCR	 Shift + >> /
 Rec VCR	 Shift + Rec / Rec Mode
 Stop	 Stop / Hold
 Stop VCR	 Shift + Stop /
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Sustituto





Original

Sustituto

	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original

Sustituto

