


 



 



 







 

 









 







 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 PMode	 Format
 SMode	 Shift + Dual
 I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 -/--	 Shift + Guide
 TV Menu	 Menu
 DVB Menu	 D. Menu
 D.Exit	 Exit
 QV	 Pre Ch
 Call	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 V-	 Vol -
 V+	 Vol +
 P-	 Ch -
 P+	 Ch +
 Red	 Red
 Green	 Green





Original	Sustituto	Original	Sustituto
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Size		3D
	Hold		Stop
	Reveal		Smart
	TV / Text		Text
	Index		Shift + Info
	Cancel		Shift + Back
	Mix		Shift + Text
	Subpage		Shift + Subt
	FAV		Shift + Pre Ch
	Info		Info
	Language		Options
	TV / Radio		TV/R
	EPG		Guide

Original	Sustituto

