 
 
 

 


 

 

 

 

 

 

 

 

 

 

 





 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 Sleep	 Sleep
 Nicam/A2	 Dual
 Still	 Pause
 16:9	 Format
 NR.	 Options
 Surround	 List
 Picture	 Shift + Format
 Tv/Av	 AV
 Display	 Info
 Sound	 Shift + Dual
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 Right	 Right

Original	Sustituto
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Red	 Red





Original	Sustituto	Original	Sustituto
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		
 Index	 D. Menu		
 Cancel	 Exit		
 Subpage	 Subt		
 Size	 Eject		
 Hold	 Stop		
 Reveal	 Menu		
 PIP Window	 Shift + Media		
 PIP Position	 Shift + Smart		
 PIP Swap	 Smart		
 TXT/CC	 Text		
 PIP Size	 Media		
 PIP On/Off	 Shift + Power		

Original	Sustituto

