

| Original | Sustituto |
|----------|-----------------------------|
| | Smart / List |
| | Red / Netflix / Search |
| | Green / APP / Repeat |
| | Power |
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | 2 |
| | 4 |
| | 1 |
| | 6 |
| | 5 |
| | Mute / Dimmer |
| | CH+ / Page+ |
| | Vol+ |
| | CH- / Page- |
| | Vol- |
| | Display / Media |

| Original | Sustituto |
|----------|--------------------------|
| | + Shift + Mute / Dimmer |
| | Sleep / Timer |
| | AV / Input / RDS |
| | Setup / OPT / |
| | Audio / Lang I/II |
| | Subtitle / EQ |
| | D.Menu / Top |
| | Text / Goto |
| | Info / Angle |
| | TV/Radio / |
| | Eject / Surround |
| | Right |
| | Up |
| | + Shift + Vol+ |
| | + Shift + CH+ / |
| | Left |
| | Down |









Screen



Original

Sustituto

 
| | | | |
|---|---------|---|---------------|
|  | Surr L- |  +  | Shift + Vol- |
|  | Surr R- |  +  | Shift + CH- / |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Original

Sustituto

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



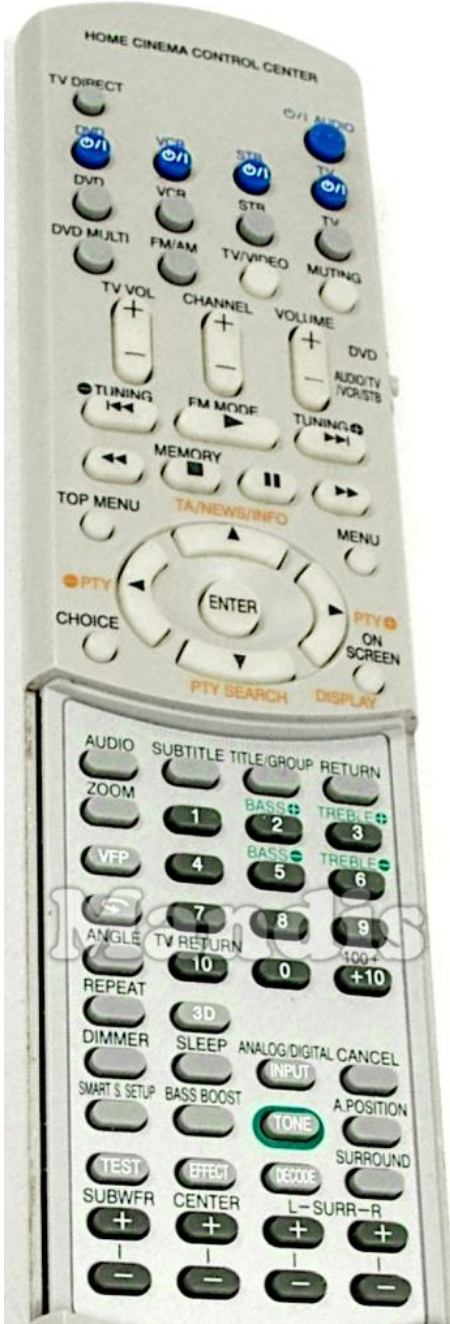


| Original | Sustituto |
|---------------|------------------------|
| Power Audio | Power |
| Power Tv | + Shift + Power |
| FM/AM | Eject / Surround |
| Tv Vol+ | Vol+ |
| Channel+ TV | CH+ / Page+ |
| Tv Vol- | Vol- |
| Channel- TV | CH- / Page- |
| Tuning- FM/AM | << / Tune- |
| FM Mode FM/AM | Smart / List |
| Tuning+ FM/AM | >> / Tune+ |
| Memory FM/AM | Menu / Home |
| TA/News/Info | Info / Angle |
| TA/News/Info | Up |
| PTY- FM/AM | Left |
| PTY+ FM/AM | Right |
| PTY Search | Down |
| PTY Search | Red / Netflix / Search |

| Original | Sustituto |
|---------------|-----------------|
| Display FM/AM | Display / Media |
| 1 FM/AM | + Shift + 1 |
| 1 TV | 1 |
| 2 FM/AM | + Shift + 2 |
| 2 TV | 2 |
| 3 FM/AM | + Shift + 3 |
| 3 TV | 3 |
| 4 FM/AM | + Shift + 4 |
| 4 TV | 4 |
| 5 FM/AM | + Shift + 5 |
| 5 TV | 5 |
| 6 FM/AM | + Shift + 6 |
| 6 TV | 6 |
| 7 FM/AM | + Shift + 7 |
| 7 TV | 7 |
| 8 FM/AM | + Shift + 8 |
| 8 TV | 8 |






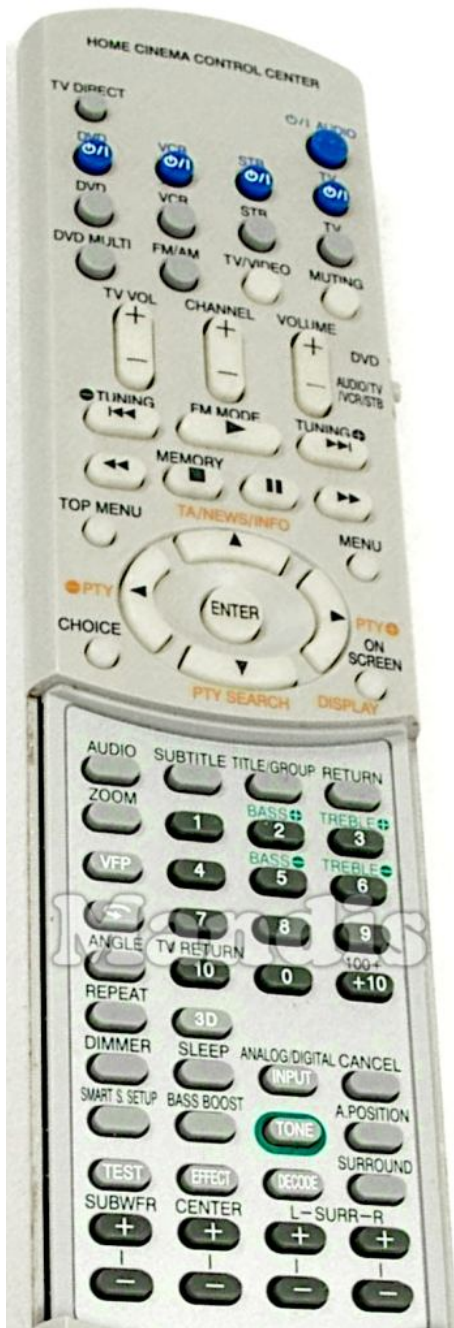  





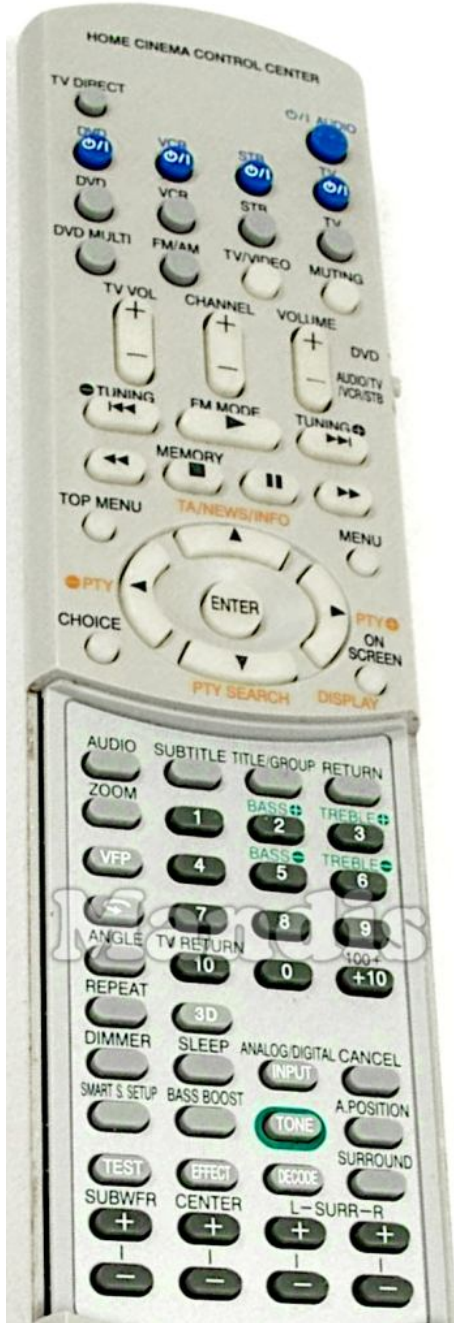








FM/AM



| Original | Sustituto | Original | Sustituto |
|--------------|-----------------|-----------------------|---------------------------|
| 9 | 9 FM/AM | SHIFT + 9 | Shift + 9 |
| 9 | 9 TV | 9 | 9 |
| TV RETURN 10 | 10 FM/AM | SHIFT + PC FAV MARKER | Shift + Fav / Marker / PC |
| TV RETURN 10 | 10/Tv Return TV | SHIFT + HDMI - SAT 0 | Shift + 0 |
| 0 | 0 TV | HDMI - SAT 0 | 0 |
| 100+ +10 | +10/100+ | SHIFT + GUIDE EPG | Shift + Guide / EPG / -/- |
| 100+ +10 | +10 TV | PC FAV MARKER | Fav / Marker / PC |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |






| Original | Sustituto |
|---|--|
|  Power DVD |  Power |
|  I<< |  I<< / Preset- |
|  Play |  Play / Slow |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Top Menu |  D.Menu / Top |
|  >> |  >> / Tune+ |
|  Up |  Up |
|  Menu |  Menu / Home |
|  Left |  Shift + Left |
|  Enter |  OK |
|  Right |  Right |
|  Set Up |  Setup / OPT / |
|  Down |  Down |
|  On Screen |  Shift + Display / Media |


| Original | Sustituto |
|---|---|
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Title Group |  Shift + Sound / Title |
|  Return |  Back / Return |
|  DVD Zoom |  Zoom / Size |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  VFP Progressive |  Smart / List |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  ← |  Left |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Angle |  Info / Angle |



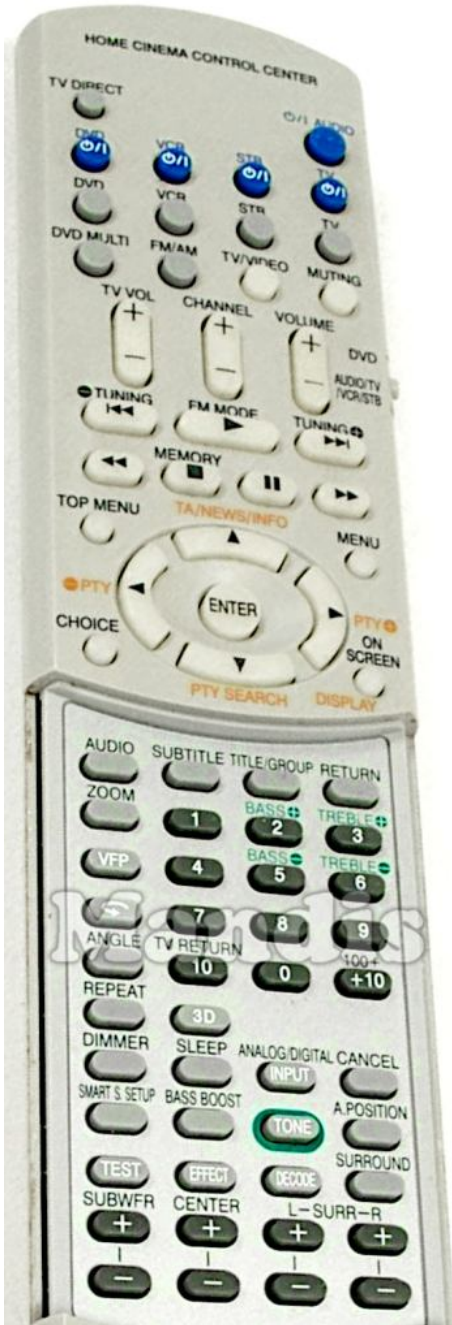 

| Original | | Sustituto | | Original | | Sustituto | |
|----------|----------------------|-----------|-----------------------|----------|--|-----------|--|
| | 10 | | Guide / EPG / -/-- | | | | |
| | 0 | | 0 | | | | |
| | +10 | | Fav / Marker / PC | | | | |
| | Display/Dimmer | | Display / Media | | | | |
| | Input Analog/Digital | | AV / Input / RDS | | | | |
| | Cancel | | Exit / Cancel / Clear | | | | |
| | HDD Sound Effect | | Sound / Title | | | | |
| | Surround | | Eject / Surround | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |



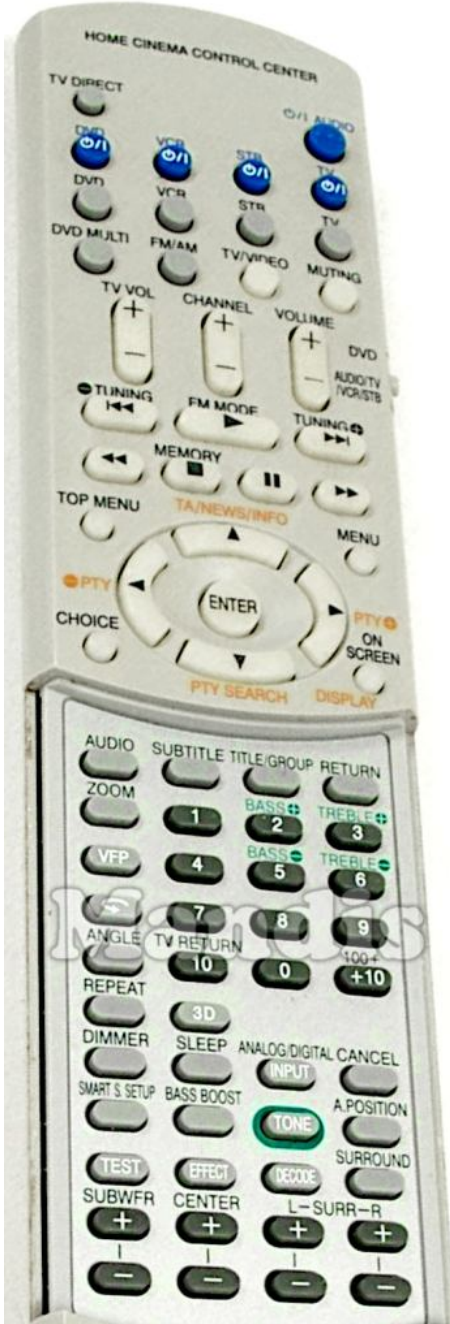 

| Original | Sustituto | Original | Sustituto |
|-------------|------------------------------|----------|-------------------|
| Power VCR | + Shift + Power | 3 VCR | + Shift + 3 |
| Power STB | Power | 3 STB | 3 |
| VCR | + Shift + Guide / EPG / -/- | 4 VCR | + Shift + 4 |
| Muting | Mute / Dimmer | 4 STB | 4 |
| Channel+ | CH+ / Page+ | 5 VCR | + Shift + 5 |
| Volume+ | Vol+ | 5 STB | 5 |
| Channel- | CH- / Page- | 6 VCR | + Shift + 6 |
| Volume- | Vol- | 6 STB | 6 |
| Play VCR | Play / Slow | 7 VCR | + Shift + 7 |
| << VCR | << / Tune- | 7 STB | 7 |
| Stop/Memory | Stop / Hold | 8 VCR | + Shift + 8 |
| Pause VCR | Pause / Step / Freeze | 8 STB | 8 |
| >> VCR | >> / Tune+ | 9 VCR | + Shift + 9 |
| 1 VCR | + Shift + 1 | 9 STB | 9 |
| 1 STB | 1 | +10 TV | Guide / EPG / -/- |
| 2 VCR | + Shift + 2 | 0 VCR | + Shift + 0 |
| 2 STB | 2 | 0 STB | 0 |

