






 




 

 






Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	-/--
	0
	Recall
	P.Mode
	S.Mode
	FAV

Original	Sustituto
	Vol+
	MTS I/II
	CH+
	Vol-
	Sub-T
	CH-
	SET
	Home
	Mouse
	Source
	Up
	Display
	Left
	OK
	Right
	Menu
	Down





Original	Sustituto
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Text/CC	<< / Tune-
<< / Text/CC	Text / Goto
Play/Pause /	Play / Slow
Play/Pause /	Pause / Step / Freeze
>> / Reveal	>> / Tune+
I<< / Hold	I<< / Preset-
I<< / Hold	+ Shift + Stop /
>>I / Size	>>I / Preset+
>>I / Size	Zoom / Size
Stop / Index	Stop / Hold
Aspect	+ Shift + Picture / Format
Freeze	+ Shift + Pause / Step / Freeze

Original	Sustituto
Sleep	Sleep / Timer
T.Shift	TV/Radio /
USB	+ Shift + 8
EPG	Guide / EPG / -/--

