 



 

 
 
 
 
 
 
 

 
 






 

 

 

 
 
 







Original	Sustituto
 DVD / TV / AV	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Repeat / TV/Radio	 TV/R
 Repeat / TV/Radio	 Shift + Text
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +

Original	Sustituto
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Pg Up	 Shift + Ch +
 Pg Dn	 Shift + Ch -
 Title	 Smart
 Info	 Info
 Goto / FAV	 Pre Ch
 Audio	 Dual
 Sub-T	 Subt
 Zoom / TTX	 Text
 Zoom / TTX	 Eject
 Setup	 Options





Original	Sustituto	Original	Sustituto
 Menu / EPG	 Menu		
 Menu / EPG	 Guide		
 USB	 Media		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 Copy/Delete / Rec	 Rec		
 Red / <<<	 Red		
 Red / <<<	 <<<		
 Green / >>>	 Green		
 Green / >>>	 >>>		
 Yellow / I<<<	 Yellow		
 Yellow / I<<<	 I<<<		
 Blue / >>>I	 >>>I		
 Blue / >>>I	 Blue		

Original	Sustituto

