



 

 
 
 














 

 
 
 



 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 P<P	 Pre Ch
 Menu	 Menu
 [i]	 Info
 Up / P+	 Up
 Up / P+	 Ch +

Original	Sustituto
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 I/II	 Dual
 PP	 Back
 TV	 TV/R
 AV	 AV
 Mute	 Mute
 Red / Sound	 Red
 Red / Sound	 Shift + Dual
 Green / Picture	 Format
 Green / Picture	 Green
 Yellow / Feature	 Yellow





Original	Sustituto	Original	Sustituto
 Blue / Install	 Blue		
 [=]	 Text		
 [=☉]	 Sleep		
 [=□]	 Stop		
 [=X] / [■ ■ ■]	 Exit		
 [/] [■]	 Shift + Text		
 [=⇕] / [□]	 Eject		
 [=?] / PC	 Smart		
 [=i]	 Options		

