



 

 
 
 














 

 
 
 



 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 P<P	 Pre Ch
 Menu	 Menu
 [i]	 Info
 Up / P+	 Up
 Up / P+	 Ch +




 
 

 
 
 



 

 

Original	Sustituto
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 I/II	 Dual
 PP	 Back
 TV	 TV/R
 AV	 AV
 Mute	 Mute
 Red / Sound	 Red
 Red / Sound	 Shift + Dual
 Green / Picture	 Format
 Green / Picture	 Green
 Yellow / Feature	 Yellow





Original

Sustituto

	Blue / Install		Blue
	[≡]		Text
	[≡☉]		Sleep
	[≡□]		Stop
	[≡X] / [■]		Exit
	[/≡] [■]		Shift + Text
	[≡+] / [□]		Eject
	[≡?] / PC		Smart
	[≡i]		Options

Original

Sustituto

