 



 


 
 











 







 



 







 

















Original	Sustituto
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Setup / OPT /
	 Smart / List
	 Fav / Marker / PC

Original	Sustituto
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Audio / Lang I/II
	 Sound / Title
	 D.Menu / Top
	 Sleep / Timer
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Sustituto
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Teletext	Text / Goto
Subtitle	Subtitle / EQ
Size	Zoom / Size
Subpage	Eject / Surround
Index	Display / Media
Hold	Shift + Stop /
Reveal	TV/Radio /
Freeze	Pause / Step / Freeze
I<<	I<< / Preset-
Stop	Stop / Hold
Play/Pause	Play / Slow
>>I	>>I / Preset+

Original	Sustituto

