



 
 


 
 








 







 



 







 















 













 



 

 




 



 

 





Original	Sustituto
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Setup / OPT /
	 Smart / List
	 Fav / Marker / PC

Original	Sustituto
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Audio / Lang I/II
	 Sound / Title
	 D.Menu / Top
	 Sleep / Timer
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 Display / Media
 Hold	 +  Shift + Stop /
 Reveal	 TV/Radio /
 Freeze	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 >>I	 >>I / Preset+

Original	Sustituto

