 




















 

 







 






Original	Sustituto
 Standby	 Power
 Standby Tv	 Shift + Power
 Tv/Video	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide
 +10	 Pre Ch
 Repeat	 Text
 A-B RPT	 Shift + Text

Original	Sustituto
 Sleep	 Sleep
 Dimmer	 D. Menu
 Surround	 Shift + Dual
 Enter	 Ok
 Up/PTY Search	 Up
 Down/TA/News/Inf	 Down
 Right/PTY+	 Right
 Left/PTY-	 Left
 Top Menu/PG	 Menu
 Set Up	 Smart
 Setting	 Options
 Menu/PL	 Info
 RDS/FL	 3D
 On Screen	 Format
 Audio Vol+	 Vol +
 Audio Vol-	 Vol -
 Level+	 Ch +





Original	Sustituto
Level-	Ch -
Tv Chanel+	Shift + Ch +
Tv Chanel-	Shift + Ch -
Tv Vol+	Shift + Vol +
Tv Vol-	Shift + Vol -
Muting	Mute
DVD/CD Play	Play
Stop/Memory	Stop
Pause/FM Mode	Pause
Recall	Back
Return	Shift + Back
>>I/Tuning+	>>I
I<</Tuning-	I<<
>>/Slow+	>>
<</Slow-	<<
FM/AM	Red
Tv Sound	Green

Original	Sustituto
Subtitle	Subt
Audio	Dual
Zoom	Eject
Title/group	List
Play Mode	Shift + Play
Angle	AV
VFP/Scan Mode	Media
SKP-Level	Yellow
Cancel	Exit
Bass/Treble	Blue

