



 



 







Original		Sustituto		Original		Sustituto	
	Power		Power		8		8
	Power Tv	+	Shift + Power		9		9
	Vol+ Tv		Vol+		Cast Vieta	+	Shift + Display / Media
	CH+ Tv	+	Shift + CH+ /		Del	+	Shift + Exit / Cancel / Clear
	Select Drive		Smart / List		Del		Fav / Marker / PC
	AV Tv	+	Shift + AV / Input / RDS		0		0
	Vol- Tv		Vol-		Input Select		AV / Input / RDS
	CH- Tv	+	Shift + CH- /		Prog/Check		TV/Radio /
	1		1		I<< Skip		I<< / Preset-
	2		2		Skip >>I		>>I / Preset+
	3		3		<< Slow/Search		<< / Tune-
	CH/Page+		CH+ / Page+		Slow/Search >>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		Play/x1.3		Play / Slow
	CH/Page-		CH- / Page-		i/Status		Info / Angle
	7		7		Guide		Guide / EPG / -/--





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Direct Navigator	 +  Shift + Smart / List
 Direct Navigator	 D.Menu / Top
 <II/Left	 Left
 OK	 OK
 Up	 Up
 Right/II>	 Right
 Function Menu	 Menu / Home
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green/Time Slip	 Green / APP / Repeat
 Yellow/Create Chapter	 Yellow / YouTube / Repeat
 Blue/Manual Skip	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 +  Shift + Rec / Rec Mode

Original	Sustituto
 Ext Link	 Eject / Surround
 Direct Tv Rec	 Picture / Format
 [=]/Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Display	 Display / Media

