



 





 






 
 

 

 



 

 

 

 
 


 
 


 
 

 
 
 



 





 



 

 










Original	Sustituto	Original	Sustituto
 Power	 Power	 Dn	 Ch -
 AV/YPbPr/VGA/Tv	 AV	 <</Rew	 <<
 1	 1	 >>/FF	 >>
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 Main Page	 Menu
 5	 5	 Up	 Ch +
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 OK	 Ok
 0	 0	 Play	 Play
 Subtitle	 Subt	 Pause	 Pause
 Audio	 Dual	 Stop	 Stop
 I<<	 I<<	 Mute	 Mute
 >>I	 >>I	 Movie	 Red
 Up	 Up	 Music	 Blue





Original	Sustituto	Original	Sustituto
 PHOTO	 Green		
 FILE	 Yellow		
 ROTATE	 3D		
 DISPLAY	 Info		
 SETUP	 Options		
 ZOOM	 Eject		
 REPEAT	 Text		
 SLIDESHOW	 TV/R		
 S-Time	 Guide		
 S-Mode	 Pre Ch		

