



Original	Sustituto	Original	Sustituto
Power	Power	4	4
VIDEO	Red / Netflix / Search	5	5
Sleep	Sleep / Timer	6	6
Tuner Band	TV/Radio /	7	7
P.Call Down	Shift + Down	8	8
P.Call Up	Shift + Up	9	9
Changer CD 1	Shift + 1	0	0
Changer CD 2	Shift + 2	+10	Guide / EPG / -/-
Changer CD 3	Shift + 7	I<< / Preset-	I<< / Preset-
Changer CD 4	Shift + 4	>>I / Preset+	>>I / Preset+
Changer CD 5	Shift + 8	Stop	Stop / Hold
Changer CD 6	Shift + 9	Play/Pause	Play / Slow
P	OK	Repeat	Green / APP / Repeat
P.Open/Close	Eject / Surround	Clear	Exit / Cancel / Clear
1	1	Check	Shift + OK
2	2	Edit	Text / Goto
3	3	P.Mode	Picture / Format













Original	Sustituto
AI Auto Focus	Info / Angle
Up	Up
Presence	Setup / OPT /
AI/Loudness	Audio / Lang I/II
Left	Left
EQ.Effect	D.Menu / Top
Right	Right
Off	Shift + Mute / Dimmer
M.Call	Back / Return
Down	Down
Display	Display / Media
S.W.Power	Shift + Power
S.W.Effect	Shift + D.Menu / Top Menu
S.W.Vol-	Shift + Vol-
S.W.Vol+	Shift + Vol+
Mute	Mute / Dimmer
LD/AUX	AV / Input / RDS

Original	Sustituto
Tape	Shift + 5
Tuner	Shift + 6
CD	Shift + 3
Volume Control -	Vol-
Volume Control +	Vol+













 
 
 





Original	Sustituto	Original	Sustituto
Power ON/Off	 Power	Input/Source	 AV / Input / RDS
Mute	 Mute / Dimmer	Mode	 Menu / Home
CD Play	 Play / Slow	Tape 1 Preset	 Up
CD Pause	 Pause / Step / Freeze	CD/Theater	 Info / Angle
Stop	 Stop / Hold	Tape 1 Hall/Ats	 Left
CD Rewind	 << / Tune-	Center	 OK
CD F.FWD	 >> / Tune+	Tape 2 REC./Jazz	 Right
Prev./Prog-	  << / Preset-	Clear	 Exit / Cancel / Clear
Next/Prog+	 >>  / Preset+	Preset Pause	 Down
Tape 2 Pre./eq	 Subtitle / EQ	Volume+	 Vol+
Fm Mode/Disc	 Eject / Surround	Band	 Smart / List
Edit	 Zoom / Size	Vol Rs+/S.Mode	 CH+ / Page+
Sleep	 Sleep / Timer	Volume-	 Vol-
Program	 TV/Radio /	Display	 Display / Media
Every Pop	 D.Menu / Top	Vol Rs-/Effect	 CH- / Page-
Funct./Direct	 Setup / OPT /	Pr 1	 1
Woofers/Speed	 Text / Goto	Pr 2	 2





Original	Sustituto	Original	Sustituto
Pr 3	 3		
Pr 4	 4		
Pr 5	 5		
Pr 6	 6		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
+10/Next Sv+V	 Guide / EPG / -/--		
Pr 0/10	 0		
Repeat	 Green / APP / Repeat		
CD Random	 Blue / Prime Video / Random		
Tape 1 Play	 Shift + Play /		
Tape 1 Stop	 Shift + Stop /		
Tape 1 Rec	 Shift + Rec / Rec Mode		
Tape 1 Rew	 Shift + << /		
Tape 1 F.FWD	 Shift + >> /		

