




 







Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [ ≡ ]	 Text / Goto









 

 

 

 
 
 

 



















Original	Sustituto	Original	Sustituto
 [≡☉]	 Subtitle / EQ		
 [ /≡]	 Picture / Format		
 [≡X]	 Exit / Cancel / Clear		
 [≡↓]	 Zoom / Size		
 [≡?]	 Display / Media		
 [≡i]	 Smart / List		





Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 <<	 << / Tune-
 >>	 >> / Tune+









































































Original	Sustituto	Original	Sustituto
	⏮		⏮ / Preset-
	⏭		⏭ / Preset+
	▶/⏸		Play / Slow
	⏸		Pause / Step / Freeze
	■		Stop / Hold
	Title		Sound / Title
	Open / Close		Eject / Surround

Original	Sustituto








 



Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Sustituto	Original	Sustituto
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 Shift + Audio / Lang I/II		

