




Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [ ≡ ]	 Text / Goto





Original

Sustituto

	[≡⊕]		Subtitle / EQ
	[ / ≡ ]		Picture / Format
	[≡X]		Exit / Cancel / Clear
	[≡⇕]		Zoom / Size
	[≡?]		Display / Media
	[≡i]		Smart / List

Original

Sustituto








Original	Sustituto
Power	Power
Up / P+	Up
Up / P+	CH+ / Page+
Menu	Menu / Home
Left	Left
Select	OK
Right	Right
Down / P-	CH- / Page-
Down / P-	Down
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Sustituto
9	9
+10	Guide / EPG / -/-
0	0
Repeat	Green / APP / Repeat
Search	Red / Netflix / Search
A→B	Yellow / YouTube / Repeat
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Prog	TV/Radio /
C	Blue / Prime Video / Random
Angle	Info / Angle
Return	Back / Return
Time	Sleep / Timer
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+







































Original	Sustituto	Original	Sustituto
			<< / Preset-
			>>  / Preset+
			▶/   Play / Slow
			Pause / Step / Freeze
			■ Stop / Hold
			Title Sound / Title
			Open / Close  Eject / Surround














Original	Sustituto	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Sustituto	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original	Sustituto	Original	Sustituto
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 +  Shift + Audio / Lang I/II		

