


 
 


 


 

 








Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Display / Media
	0
	Smart / List
	Vol+
	Info / Angle
	CH+ / Page+

Original	Sustituto
	Vol-
	Setup / OPT /
	CH- / Page-
	Menu / Home
	Up
	D.Menu / Top
	Left
	OK
	Right
	Back / Return
	Down
	AV / Input / RDS
	Exit / Cancel / Clear
	Guide / EPG / -/-
	Text / Goto
	Audio / Lang I/II
	Subtitle / EQ





Original	Sustituto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	Pause / Step / Freeze
	>> / Tune+
	Zoom / Size
	Play / Slow
	Stop / Hold
	Shift + Red / Netflix /

Original	Sustituto

