



Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall/Last View	Pre Ch
Radio/Tv	TV/R
CH/Page+	Ch +
CH/Page-	Ch -
Internet	Smart
Skype	Media

Original	Sustituto
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause	Pause
Play	Play
i/Status	Info
X/Exit	Exit
Option	Options
Return	Back
Direct Navigator	List
Guide	Guide
Function Menu	Menu
Up	Up
Down	Down
Right	Right





Original	Sustituto
Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
	+
Rec Mode	Shift + Rec
Text	Text
STTL	Subt
Prog/Check	Sleep
Chapter	AV
Time Slip	Eject
Audio	Dual
Drive Select	D. Menu
	+
Del	Shift + Exit
Manual Skip -10s	Format

Original	Sustituto
Manual Skip +60s	3D
	+
Power Tv	Shift + Power
	+
Av Input Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
	+
CH+ Tv	Shift + Ch +
	+
CH- Tv	Shift + Ch -

