



 







 










 







 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Jump	 Back
 -/--	 Shift + Guide
 S.Mode	 Shift + Dual
 I-II	 Dual
 P.Mode	 Format

Original	Sustituto
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Input	 AV
 Menu	 Menu
 Fav. CH	 Pre Ch
 Vol. +	 Vol +
 Vol.-	 Vol -
 CH. +	 Ch +
 CH.-	 Ch -
 Rec	 Rec
 DTV / Radio	 TV/R
 Sleep	 Sleep





Original		Sustituto		Original		Sustituto	
	Subtitle		Subt		>>		>>
	P.Size		Eject		<<		<<
	Subpage	+	Shift + Subt		>>		>>
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[≡i]		Smart				
	[≡?]		Media				
	[≡↓]		3D				
	[≡□]	+	Shift + Stop				
	[≡] / [/≡]		Text				
	Stop		Stop				
	Play/Pause / Timeshift		Play				
	Play/Pause / Timeshift		Pause				
	Info		Info				
	<<		<<				

