


 




 
 

 
 



 






 



 









 


 
 


 



 






 

 






 
 

 




Original	Sustituto	Original	Sustituto
 Standby	 Power	 Tv/Radio	 TV/R
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Record	 Rec
 3	 3	 Stop	 Stop
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 Info	 Info	 TTX	 Text
 Recall	 Back	 FAV	 Pre Ch
 EPG	 Guide	 CH+	 Ch +
 Audio	 Dual	 CH-	 Ch -
 Subtitle	 Subt	 Media	 Media





	Original	Sustituto	Original	Sustituto
	<<	 <<		
	Play	 Play		
	<<	 <<		
	USB	 Smart		
	>>	 >>		
	Pause	 Pause		
	>>	 >>		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

