
 
 






 
 









 



 




 


 
 


Original	Sustituto	Original	Sustituto
On/Off	 Power	Display	 Info
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Menu Down	 Down
Stop	 Stop	Progr.	 Sleep
Auto/Track	 +  Shift + Subt	Return	 Back
Slow Up	 Ch +	Volume+	 Vol +
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	1	 1
Pause	 Pause	2	 2
Title	 Smart	3	 3
DVD/TV	 AV	Next	 >>
Pepeat/1/All	 Text	4	 4
Zoom	 Eject	Prev.	 <<
Menu	 Menu	5	 5
Menu Up	 Up	Setup	 Options
Menu Left	 Left	Top Menu	 D. Menu
OK Enter	 Ok	6	 6



Original	Sustituto	Original	Sustituto
7	 7	Resume	 List
8	 8	3D	 3D
Pbc	 Media	Angle	 Format
R/L	 +  Shift + Dual		
9	 9		
+10	 Guide		
0	 0		
Np	 +  Shift + Smart		
Clear/00:00	 Exit		
C/CH	 Pre Ch		
Play	 Play		
Open/Close	 +  Shift + Mute		
Rewind	 <<		
Record	 Rec		
Audio	 Dual		
F.Forward	 >>		
Shuffle	 TV/R		

