


















Original	Sustituto	Original	Sustituto
Audio	 Audio / Lang I/II	PRG	 TV/Radio /
AFFICHE	 Power	CLR - EFF	 Exit / Cancel / Clear
Open / Close - OUVRE/FERME	 Eject / Surround	Up	 Up
Angle	 Info / Angle	Left	 Left
1	 1	OK	 OK
Subtitle - SOUS TITRE	 Subtitle / EQ	Title - TITRE	 Sound / Title
Search -	 Red / Netflix / Search	Right	 Right
2	 2	Down	 Down
3	 3	Vol+	 Vol+
4	 4	MODE	 Smart / List
5	 5	Vol-	 Vol-
6	 6	ZOOM	 Zoom / Size
7	 7	A-B	 Yellow / YouTube / Repeat
8	 8	STOP	 Stop / Hold
9	 9	MARK -	 Fav / Marker / PC
0	 0	Return -	 Back / Return
Menu	 Menu / Home	Setup - REGL	 Setup / OPT /

Original	Sustituto	Original	Sustituto
PRG	 TV/Radio /	CLR - EFF	 Exit / Cancel / Clear
Up	 Up	Left	 Left
OK	 OK	Title - TITRE	 Sound / Title
Right	 Right	Down	 Down
Vol+	 Vol+	MODE	 Smart / List
Vol-	 Vol-	ZOOM	 Zoom / Size
A-B	 Yellow / YouTube / Repeat	STOP	 Stop / Hold
MARK -	 Fav / Marker / PC	Return -	 Back / Return
Setup - REGL	 Setup / OPT /		





Original	Sustituto	Original	Sustituto
F.Rwd - AR.RAPID	TUNE- << / Tune-		
F.Fwd - AV.RAPID	TUNE+ >> / Tune+		
Mute -	DIMMER MUTE / Mute / Dimmer		
Slow R -	CH PAGE - / CH- / Page-		
Slow F -	CH PAGE + / CH+ / Page+		
Skip+ / SAUT+	PRESET+ >>I / Preset+		
Skip- / SAUT-	PRESET- I<< / Preset-		
PAUSE/IMAGE	STEP - FREEZE / Pause / Step / Freeze		
Play - LECTURE	SLOW / Play / Slow		

