

 


 


 







 

 

 
 

 







 

 




Original	Sustituto	Original	Sustituto
On/Off	 Power	Tracking+	 Ch +
Audio Out	 Mute	Tracking-	 Ch -
Slow Down	 +  Shift + Play	Menu Right	 Right
Stop	 Stop	Menu Down	 Down
Sp/Lp/Speed	 Eject	Next	 >>
Auto/Track	 List	Prev.	 <<
Pause	 Pause	1	 1
Slow/Dpss+	 Vol +	Audio	 Dual
Slow/Dpss-	 Vol -	2	 2
Mon/TV	 +  Shift + TV/R	3	 3
VCR/TV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
T.Set/Clock	 Sleep	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	-/--	 Guide



Original	Sustituto	Original	Sustituto
0	 0	Counter Reset	 +  Shift + Yellow
Progr/C/CH	 Pre Ch	Weekly	 Yellow
Record	 Rec	Counter Clock	 +  Shift + Red
Rewind	 <<	Counter/Memor	 +  Shift + Green
Otr/A.Otr	 D. Menu	Search Index	 TV/R
Play	 Play	Show View	 Smart
F.Forward	 >>	PAL/Secam	 Format
Index Pict-	 +  Shift + Down	Rec/Mode	 +  Shift + Rec
Index Pict+	 +  Shift + Up		
On/Off	 +  Shift + Power		
Counter Stop	 +  Shift + Stop		
Rec. On/Off	 3D		
Input Source	 +  Shift + AV		
Info/Intro	 +  Shift + Info		
Timer/Record	 Options		
Once	 Red		
Daily	 Green		

