


 


 

 


 









 



 
 
 
 
 
 
 
 
 
 



 

 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 ←PR	 Back
 EPG	 Guide
 Menu	 Menu
 Up / PR+	 Up

Original	Sustituto
 Up / PR+	 Ch +
 Down / PR-	 Down
 Down / PR-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK / List	 Ok
 OK / List	 List
 Info	 Info
 Exit	 Exit
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / TXT	 Green
 Green / TXT	 Text
 Yellow / Subtitle	 Yellow
 Yellow / Subtitle	 Subt





Original	Sustituto	Original	Sustituto
Blue / L/R	Blue		
Page+	Shift + Ch +		
Page-	Shift + Ch -		
Pause	Pause		
::	Smart		
FAV	Pre Ch		
-	Media		
PAL / NTSC	Format		
Record	Rec		
Play	Play		
Stop	Stop		
TV / AV	AV		
<< Fast	<<		
Fast >>	>>		
< Seek	I<<		
Seek >	>>I		

