


































































































Original	Sustituto	Original	Sustituto
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Sustituto	Original	Sustituto
 Power	 MUTE	 TV	 DVD
 MUTE	 SHIFT	 SAT	 AUX
 1	 SLOW	 STEP-FREEZE	 HOLD
 2	 TUNE-	 PRESET-	 PRESET+
 3	 TUNE+	 EQ	 SURROUND
 4	 TITLE	 SOUND	 AUDIO
 5	 LANG I/II	 FORMAT	 SUBTITLE
 6	 AUDIO	 PICTURE	 ZOOM
 7	 SURROUND	 TOP MENU	 OPT-TOOLS
 8	 MEDIA / DISPLAY	 GOTO	 RDS
 9	 TV/Radio /	 D.MENU	 SETUP
 0	 Rec / Rec Mode	 TEXT	 AV INPUT
 Up	 HOME	 ANGLE	 INFO
 Left	 MENU	 OK	 RETURN
 Right	 EXIT	 CLEAR	 BACK
 Down	 CANCEL	 LIST	 SMART
 Menu	 VOL+	 MEDIA	 CH PAGE
 Home	 VOL-	 DISPLAY	 TV
 TV	 TV	 DVD	 DVD
 DVD	 DVD	 CD-DB	 CD-DB
 SAT	 AUX	VIDEO	 TAPE
 AUX	 AUX	TUNER	 TUNER
SLOW	 STEP-FREEZE	AUX-HDD	 USB
STEP-FREEZE	HOLD	BLUETOOTH	 BLUETOOTH
HOLD	PRESET-	HDMI-BAT	 HDMI-BAT
PRESET-	PRESET+	FAV MARKER	 FAV MARKER
PRESET+	SURROUND	GUIDE EPG	 GUIDE EPG
SURROUND	SOUND	NETFLIX	 NETFLIX
SOUND	AUDIO	APP	 APP
AUDIO	SUBTITLE	YouTube	 YouTube
SUBTITLE	TIMER	Prime Video	 Prime Video
TIMER	PROGRAM	SEARCH	 REPEAT
PROGRAM	TV RADIO	REPEAT A-B	 RANDOM
TV RADIO	RDS		
RDS	AV INPUT		
AV INPUT	HOME		
HOME	MENU		
MENU	MENU		