




 

 


 










Original	Sustituto
	Power
	Mute
	Play / Pause
	Play / Pause
	Stop
	Rec
	<<
	>>
	<<
	>>
	:Q
	TV Play
	Format
	Live TV
	≡
	⚙
	Green / TTX

Original	Sustituto
	Source
	Home
	Up
	Down
	Right
	Left
	OK
	Del
	Blue / Info
	Back
	Vol+
	Vol-
	Internet
	CH+
	CH-
	Mouse
	1





Original	Sustituto	Original	Sustituto
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
Red / EPG	Red / EPG	GUIDE EPG	Guide / EPG / -/--
Left Arrow	←]	PC FAV MARKER	Fav / Marker / PC
Red / EPG	Red / EPG	NETFLIX SEARCH	Red / Netflix / Search
Green / TTX	Green / TTX	APP REPEAT	Green / APP / Repeat
Yellow / FAV	Yellow / FAV	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue / Info	Blue / Info	Prime Video RANDOM	Blue / Prime Video / Random
Yellow / FAV	Yellow / FAV	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC

Original	Sustituto

