
 
 




 

 






 



 
 


 

 


 


 




Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Subt.List	 Subt	Menu Down	 Down
Reveal	 Smart	Back	 Back
Sleep Timer	 Sleep	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Sustituto	Original	Sustituto
8	 8	Contrast+	 +  Shift + Ch +
9	 9	Level L	  <<
Guide -/-- 1.	 Guide	Contrast-	 +  Shift + Ch -
0/10	 0	Level R/Woofer	 >>
2.Fav P/C 2.	 Pre Ch		
Off/Tim	 Options		
Red	 Red		
Color+ P.Std	 +  Shift + Up		
Green	 Green		
Color- S.Std	 +  Shift + Down		
Yellow	 Yellow		
Nicam/Mono	 3D		
Surround	 List		
Blue	 Blue		
Audio-	 +  Shift + Vol -		
Tone-	 <<		
Tone+	 >>		

