

 




 
 








 
 

 

 




 




Original	Sustituto	Original	Sustituto
 Power	 Power	 5	 5
 Mute	 Mute	 6	 6
 DTV / Radio	 TV/R	 7	 7
 AVC	 Smart	 8	 8
 Info	 Info	 9	 9
 TV Audio	 Dual	 0	 0
 DTV / TV	 Shift + TV/R	 Recall	 Back
 Sleep	 Sleep	 Vol+	 Vol +
 Wide	 Format	 Vol-	 Vol -
 Subtitle	 Subt	 Guide	 Guide
 Freeze	 Pause	 List	 List
 Picture	 Shift + Format	 Prog+	 Ch +
 Sound	 Shift + Dual	 Prog-	 Ch -
 1	 1	 Exit	 Exit
 2	 2	 Favorite	 Pre Ch
 3	 3	 Up	 Up
 4	 4	 Left	 Left



