

 
 



 




 
 
 
 

 
 

 


 
 


 


 


 
 


Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Right	 Right
Audio Off	 Mute	Return	 Back
Slow Down	 Ch -	Menu Down	 Down
Stop	 Stop	Progr.	 Sleep
Slow Up	 Ch +	Volume+	 Vol +
Pause	 Pause	Volume-	 Vol -
Subt.	 Subt	Next	 >>
Auto/Track	 Red	1	 1
Rep/A-B	 +  Shift + Text	2	 2
Title	 List	Top Menu	 D. Menu
Repeat/1/All	 Text	Prev.	  <<
Zoom	 Eject	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Original	Sustituto	Original	Sustituto
9	 9	F.Forward	 >>
+10	 Guide	Audio	 Dual
0	 0	Echo-	 +  Shift + Ch -
Record	 Rec	Clear/00:00	 +  Shift + 9
Rewind	 <<		
Shuffle	 TV/R		
C/CH	 Pre Ch		
Np	 Blue		
Tone	 Yellow		
Remain	 Green		
Open/Close	 +  Shift + Mute		
Vocal/Assist	 Media		
Angle	 Format		
Timer	 AV		
Play	 Play		
Game	 Smart		
Echo+	 +  Shift + Ch +		

