



 




Original	Sustituto
 Power	 Power
 Tv/Radio	 TV/R
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 Rec	 Rec
 Media	 Media
 Lang.	 Dual
 SUB	 Subt
 Guide	 Guide
 Menu	 Menu
 FAV.	 Pre Ch
 X/Exit	 Exit
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 i	 Info
 P+	 Ch +
 P-	 Ch -
 Red / PVR	 Red
 Green	 Green
 Yellow/Timer	 Yellow
 Blue	 Blue
 1	 1
 2	 2
 3	 3
 4	 4





Original		Sustituto	
5 jkl	5	5	5
6 mno	6	6	6
7 pqrs	7	7	7
8 tuv	8	8	8
9 wxyz	9	9	9
0 &_	0	0	0
TTX	TTX	REPEAT TEXT	Text
CH	CH Back	RETURN BACK	Back

Original		Sustituto	

