










 
 
 

 








 




 
 
 

 






 












 
 

 

 
 
 

 









Original	Sustituto	Original	Sustituto
 Power	 Power	 Guide	 Guide
 Mute	 Mute	 i	 Info
 NTSC / PAL	 Format	 Menu	 Menu
 Audio	 Dual	 Up / CH+	 Up
 TV / Radio	 AV	 Down / CH-	 Down
 1	 1	 Right / Vol+	 Right
 2	 2	 Left / Vol-	 Left
 3	 3	 OK	 Ok
 4	 4	 Up / CH+	 Ch +
 5	 5	 Down / CH-	 Ch -
 6	 6	 Right / Vol+	 Vol +
 7	 7	 Left / Vol-	 Vol -
 8	 8	 ↑	 Shift + Ch +
 9	 9	 ↓	 Shift + Ch -
 0	 0	 Exit	 Exit
 TV / Radio	 TV/R	 FAV	 Pre Ch
 Recall	 Back	 SAT	 Smart





Original		Sustituto		Original		Sustituto	
	<<		<<				
	Play		Play				
	>>		>>				
	> <	 + 	Shift + Stop				
	>	 + 	Shift + Pause				
	Pause		Pause				
	Stop		Stop				
	<		<<				
	>		>>				
	Rec		Rec				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	Subtitle		Subt				

