











 



 













 
 






 



Original	Sustituto
 []→	 Exit / Cancel / Clear
 Power	 Power
 [1 2]	 Shift + Red / Netflix /
 [← →]	 Shift + Green / APP /
 [> <]	 Shift + Yellow / YouTube /
 Red / Rec	 Rec / Rec Mode
 Red / Rec	 Red / Netflix / Search
 Green / <<	 Green / APP / Repeat
 Green / <<<	 <<< / Tune-
 Yellow / Stop	 Stop / Hold
 Yellow / Stop	 Yellow / YouTube / Repeat
 Blue / Play	 Blue / Prime Video / Random
 Blue / Play	 Play / Slow
 White / >>>	 >>> / Tune+
 White / >>>	 Fav / Marker / PC
 []	 Shift + Guide / EPG / -/-
 Up	 Up

Original	Sustituto
 [≡]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 [> <]	 Pause / Step / Freeze
 Down	 Down
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5


 






 
 








 







 

















 









 

 

 



 









	Original	Sustituto	Original	Sustituto
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↕] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[<>]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[]	 Setup / OPT /		






Original	Sustituto	Original	Sustituto
	DVD		Shift + 2
	[1 2]		Red / Netflix / Search
	[<- >]		Green / APP / Repeat
	[> <]		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	[]		Shift + Guide / EPG / -/-
	Up		Up
	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P / -/-		Guide / EPG / -/-





Original	Sustituto
 []→	 Exit / Cancel / Clear
 Power	 Power
 [1 2]	 Shift + Red / Netflix /
 [← →]	 Shift + Green / APP /
 [> <]	 Shift + Yellow / YouTube /
 Red / Rec	 Red / Netflix / Search
 Red / Rec	 Rec / Rec Mode
 Green / <<	 Green / APP / Repeat
 Green / <<	 << / Tune-
 Yellow / Stop	 Stop / Hold
 Yellow / Stop	 Yellow / YouTube / Repeat
 Blue / Play	 Blue / Prime Video / Random
 Blue / Play	 Play / Slow
 White / >>	 Fav / Marker / PC
 White / >>	 >> / Tune+
 []	 Shift + Guide / EPG / -/-
 Up	 Up

Original	Sustituto
 [≡]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 [> <]	 Pause / Step / Freeze
 Down	 Down
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5



 






 



 


 







 













 


 






























	Original	Sustituto	Original	Sustituto
	6	6		
	7	7		
	8	8		
	9	9		
	[i+]	Info / Angle		
	0	0		
	P<P / -/--	Guide / EPG / -/--		
	[⊙]	Sleep / Timer		
	[?]	AV / Input / RDS		
	[↕] / Zoom	Zoom / Size		
	Smart Sound	Sound / Title		
	[<>]	D.Menu / Top		
	Smart Picture	Picture / Format		
	Instant Rec	Shift + Rec / Rec Mode		
	I-II	Audio / Lang I/II		
	DNR	Back / Return		
	[■]	Setup / OPT /		





Original	Sustituto	Original	Sustituto
 []→	 Exit / Cancel / Clear	 Down	 Down
 Power	 Power	 [...]	 Subtitle / EQ
 [1 2]	 Red / Netflix / Search	 Vol+	 Vol+
 [← →]	 Green / APP / Repeat	 Mute	 Mute / Dimmer
 [> <]	 Yellow / YouTube / Repeat	 P+	 CH+ / Page+
 Rec	 Rec / Rec Mode	 Vol-	 Vol-
 <<	 << / Tune-	 P-	 CH- / Page-
 Stop	 Stop / Hold	 1	 1
 Play	 Play / Slow	 2	 2
 >>	 >> / Tune+	 3	 3
 []	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5
 [≡]	 Text / Goto	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 [> <]	 Pause / Step / Freeze	 [i+]	 Info / Angle



