
 
 


 

 
 
 
 



 


 





 
 

 

 

 
 




Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 List	Menu Off	 Exit
Reveal	 Options	Menu Down	 Down
Info	 Info	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Sustituto	Original	Sustituto
8	 8	Audio+	 +  Shift + Vol +
9	 9	3.*	 +  Shift + Guide
Guide -/-- 1.	 Guide	4.# 16:9	 Format
0/10	 0	Surround	 +  Shift + Red
2.Fav P/C 2.	 Pre Ch	Nicam/Mono	 +  Shift + Green
Red	 Red	Level L	 +  Shift + Yellow
Green	 Green	Level R/Woofer	 +  Shift + Blue
Yellow	 Yellow		
Blue	 Blue		
Color+ P.Std	 +  Shift + Format		
Tone+	 +  Shift + Ch +		
Input	 Media		
Output	 Smart		
Color- S.Std	 +  Shift + Dual		
Audio-	 +  Shift + Vol -		
Tone-	 +  Shift + Ch -		
AV 2	 +  Shift + AV		

