


 


 

 







 

 
 


 


 
 
 
 










Original	Sustituto	Original	Sustituto
 Power	 Power	 Photo	 Shift + 3
 Title	 Options	 All Media	 Shift + 4
 Subtitle	 Subt	 ←Slow	 Back
 SCR Size	 Format	 Stop	 Stop
 Angle	 Red	 Play	 Play
 Repeat	 Text	 Pause	 Pause
 A-B Repeat	 Green	 Up	 Up
 BRT Cont.	 Blue	 Down	 Down
 Device	 Yellow	 Right	 Right
 Menu	 Menu	 Left	 Left
 Setup	 D. Menu	 OK	 Ok
 Info	 Info	 >>	 >>
 Search	 TV/R	 <<	 <<
 Audio	 Dual	 >>	 >>
 Movie	 Shift + 1	 <<	 <<
 Tv Out	 AV	 1/Select	 1
 Music	 Shift + 2	 2/Select All	 2

Original	Sustituto	Original	Sustituto
 Power	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 ▶	 ⏸
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 ▲	 AV
 TOP MENU	 MENU	 OK	 INFO
 CLEAR	 EXIT	 RETURN	 BACK
 VOL +	 HOME	 SMART	 CH +
 VOL -	 APP	 MEDIA	 CH -
 1	 2	 3	 4
 4	 5	 6	 7
 7	 8	 9	 FAV
 GUIDE	 0	 PRE-CH	 A
			
www.mandis.tv			



