


 

 
 




| Original | Sustituto |
|---|---|
|  Standby |  Power |
|  Eject |  Eject |
|  Audio Out |  Dual |
|  Display |  Info |
|  Timer On/Off |  Sleep |
|  Timer On/Off |  Shift + AV |
|  Mode OSD |  Media |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Menu |  Menu |
|  Set |  Options |
|  Clear |  Exit |
|  SV/V+/Timer |  3D |
|  Up |  Up |
|  Down |  Down |

| Original | Sustituto |
|--|--|
|  Right |  Right |
|  Left |  Left |
|  Zero Back |  Blue |
|  Skip Search |  Yellow |
|  Super P. |  Red |
|  Lock |  Shift + Stop |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/--/AM/PM |  Guide |









 

 


 

 
 



 








 




 



| Original | Sustituto | Original | Sustituto |
|---------------|-----------|----------|-----------|
| Input Select | AV | | |
| Play | Play | | |
| >> | >> | | |
| << | << | | |
| Stop | Stop | | |
| Pause/Still | Pause | | |
| Rec | Rec | | |
| Tv/VCR | TV/R | | |
| A.DUB | Format | | |
| Direct Rec Tv | Back | | |
| Tape Speed | Text | | |
| I> Slow | Subt | | |
| DPSS >/+ | >>I | | |
| < DPSS/- | I<< | | |
| | Smart | | |

| Original | Sustituto | Original | Sustituto |
|----------|-----------|----------|-----------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | | Sustituto | | Original | | Sustituto | |
|---|--------------|---|-------|----------|--|-----------|--|
|  | Standby |  | Power | | | | |
|  | CH+ |  | Ch + | | | | |
|  | CH- |  | Ch - | | | | |
|  | Vol+ |  | Vol + | | | | |
|  | Vol- |  | Vol - | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | -/-- |  | Guide | | | | |
|  | Input Select |  | AV | | | | |

