 














 



 

 
 

 
 

 


 
 




 

 

 
 
 
 
 

 



 

 

 
 

 


 


 
 







Original	Sustituto	Original	Sustituto
	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 



 
 



 


 
 


 


 









Original	Sustituto
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
> DVD	Play
<< DVD	<<

Original	Sustituto
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I


 












Original	Sustituto	Original	Sustituto
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 




 



 
 

 





 

 






 










Original	Sustituto	Original	Sustituto
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<






Original	Sustituto
 Power On	 Power
 Power Off	 Shift + Power
 SPKR/Menu	 Menu
 Delay/Normal	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡+]	 Guide
 Mem/[≡◆]	 Pre Ch
 Direct	 Smart

Original	Sustituto
 Preset ▲/Blue	 Ch +
 RDS/D.Skip	 Options
 >>	 >>
 <<	 <<
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 >>	 >>
 <<	 <<
 Power (On /Off)	 Media
 PR+ VCR	 Shift + Ch +
 PR- VCR	 Ch -
 Vol+ VCR	 Vol +
 Vol- VCR	 Vol -
 Input VCR	 AV
 1 VCR	 Shift + 1
 2 VCR	 Shift + 2





Original	Sustituto
 3 VCR	 +  Shift + 3
 4 VCR	 +  Shift + 4
 5 VCR	 +  Shift + 5
 6 VCR	 +  Shift + 6
 7 VCR	 +  Shift + 7
 8 VCR	 +  Shift + 8
 9 VCR	 +  Shift + 9
 0 VCR	 +  Shift + 0
 Clear VCR	 Exit
 Play VCR	 Red
 Stop VCR	 Green
 Rec VCR	 Rec
 >> VCR	 Blue
 << VCR	 Yellow

Original	Sustituto





	Original	Sustituto	Original	Sustituto
	<>	 Play		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Rec	 Rec		

