

 

 




 
 
 
 
 

 
 






 

 




 
 
 
 
 

 
 
| Original | Sustituto |
|---|---------------------------------------|
|  | Mute / Dimmer |
|  | Power |
|  | TV/Radio / |
|  | Shift + 2 |
|  | Shift + TV/Radio / Program |
|  | Shift + Rec / Rec Mode |
|  | Shift + Yellow / YouTube / REPEAT A-B |
|  | Audio / Lang I/II |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |

| Original | Sustituto |
|---|-----------------------|
|  | 0 |
|  | Guide / EPG / -/- |
|  | Smart / List |
|  | Picture / Format |
|  | Text / Goto |
|  | Menu / Home |
|  | Exit / Cancel / Clear |
|  | Info / Angle |
|  | Vol+ |
|  | Up |
|  | CH+ / Page+ |
|  | Left |
|  | OK |
|  | Right |
|  | Vol- |
|  | Down |
|  | CH- / Page- |






 


 


 

 
 

 









 



| Original | Sustituto |
|---|---------------------------------------|
|  | Mute / Dimmer |
|  | Power |
|  | TV/Radio / |
|  | Shift + 2 |
|  | Shift + TV/Radio / Program |
|  | Shift + Rec / Rec Mode |
|  | Shift + Yellow / YouTube / REPEAT A-B |
|  | Audio / Lang I/II |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |

| Original | Sustituto |
|---|-----------------------|
|  | 0 |
|  | Guide / EPG / -/- |
|  | Smart / List |
|  | Picture / Format |
|  | Text / Goto |
|  | Menu / Home |
|  | Exit / Cancel / Clear |
|  | Info / Angle |
|  | Vol+ |
|  | Up |
|  | CH+ / Page+ |
|  | Left |
|  | OK |
|  | Right |
|  | Vol- |
|  | Down |
|  | CH- / Page- |





| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Mute / Dimmer |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  Rec / Rec Mode |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  Audio / Lang I/II |
|  |  Picture / Format |
|  |  TV/Radio / |
|  |  Text / Goto |
|  |  Menu / Home |
|  |  Up |
|  |  Info / Angle |
|  |  Left |
|  |  OK |

| Original | Sustituto |
|---|---|
|  |  Right |
|  |  Exit / Cancel / Clear |
|  |  Down |
|  |  Vol+ |
|  |  Smart / List |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  CH- / Page- |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |



