




 






Original	Sustituto	Original	Sustituto
Power	Power	Enter	Ok
Open/Close	Eject	Up	Up
Audio	Dual	Down	Down
Subtitle	Subt	Right	Right
Setup	Options	Left	Left
Camera/Angle	TV/R	Clear	Exit
Play	Play	Program	Sleep
Stop	Stop	Repeat	Text
Pause/Step	Pause	Zoom	Shift + Eject
>>	>>	Resolution	3D
<<	<<	A-B	Shift + Text
>>	>>	1	1
<<	<<	2	2
DVD Menu	D. Menu	3	3
Return	Back	4	4
Display	Info	5	5
Title	List	6	6





Original		Sustituto		Original		Sustituto	
	7		7				
	8		8				
	9		9				
	0		0				

