



Original	Sustituto
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Original	Sustituto
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >> / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





	Original	Sustituto
	Subtitle	Subtitle / EQ
	Volume-	Vol-
	Zoom	Zoom / Size
	Return	Back / Return
	Up	Up
	Left	Left
	Enter	OK
	Right	Right
	Menu	Menu / Home
	Down	Down
	Display	Display / Media
	Setup	Setup / OPT /
	Stop	Stop / Hold
	Pause / Step	Pause / Step / Freeze
	Play	Play / Slow
	<< / Slow Scan-	<< / Tune-
	>> / Slow	>> / Tune+

	Original	Sustituto
	I<< / Skip Scan-	I<< / Preset-
	>>I / Skip Scan+	>>I / Preset+
	Title	+  Shift + Sound / Title
	Marker	Fav / Marker / PC
	Search	Red / Netflix / Search
	Angle	Info / Angle

